

5X Floor Stand Assembly Instructions

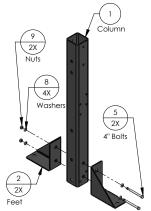

Step 1


Assemble left and right feet to column as shown.

Note orientation of holes on column. Hand tighten only.

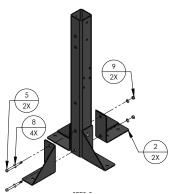

Step 2


Assemble front and back feet to column as shown. Hand tighten only.

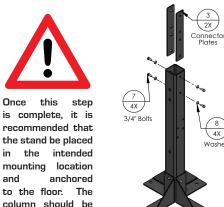

Step 3

Assemble connector plates to lower column as shown. Hand tighten only.


Item #	Description	Qty
1	Column	2
2	Foot	4
3	Connector Plate	2
4	Arm	4
5	Hex Cap Screw 5/16" - 18, 4"	8
6	Hex Cap Screw 5/16" - 18, 1.5"	4
7	Hex Cap Screw 5/16" - 18, 3/4"	8
8	Washer, 5/16"	32
9	Nut 5/16 - 18	16



Step 4

Assemble connector plates to lower column. Hand tighten only. Verify upper column is vertical and flush with lower column.

Tighten all fasteners to 10 ft-lbs.

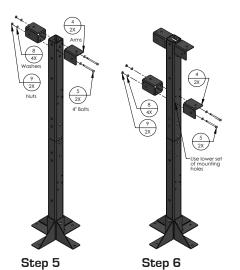

and


ft-lbs.

adjusted to vertical

prior to tightening

the fasteners to 10

Assemble arms to upper column as shown. Tighten all fasteners to 10 ft-lbs.

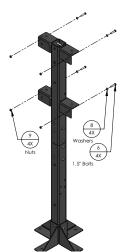



Step 7 Assemble fasteners to arms, to create studs for

mounting the charger.

Tighten all fasteners to 10 ft-lbs.





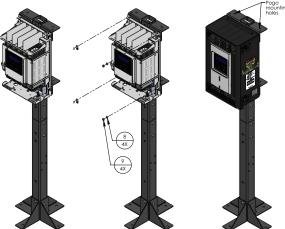

Step 8

Remove Charger cover and hang charger on studs. Fasten charger to arms as shown.

Tighten all fasteners to 10 ft-lbs..

Complete electical installation (see manual) and replace charger cover.



Power Designers USA LLC

4005 Felland Drive, Suite 116 • Madison, WI 53718 USA

+1.608.231.0450 • www.powerdesigners.com Power Designers USA LLC reserves the right to incorporate design and material changes without notice or obligation.