8X & 12X Floor Stand Assembly Instructions


and

ft-lbs.

column should be adjusted to vertical

prior to tightening


the fasteners to 10

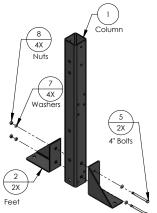

Step 1


Assemble left and right feet to column as shown.

Note orientation of holes on column. Hand tighten only.

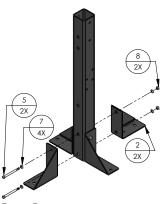

Step 2


Assemble front and back feet to column as shown. Hand tighten only.

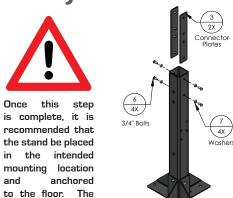

Step 3

Assemble connector plates to lower column as shown. Hand tighten only.

Item #	Description	Qty
1	Column	2
2	Foot	4
3	Connector Plate	2
4	Arm	4
5	Hex Cap Screw 5/16" - 18, 4"	8
6	Hex Cap Screw 5/16" - 18, 3/4"	12
7	Washer, 5/16"	32
8	Nut 5/16 - 18	12




Step 4


Assemble connector plates to lower column. Hand tighten only.

Verify upper column is vertical and flush with lower column.

Tighten all fasteners to 10 ft-lbs.

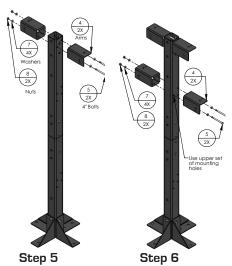

Assemble arms to upper column as shown. Tighten all fasteners to 10 ft-lbs.

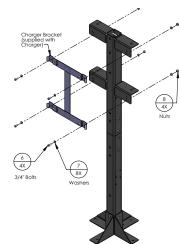

Step 7

Assemble Fasteners to mount charger bracket as shown.

Tighten all fasteners to 10 ft-lbs.



Step 8

Mount charger to charger brackets. Follow charger mounting installation found in charger manual (page 12).



DO NOT MOUNT THE CHARGER **UNLESS THE FEET HAVE BEEN PROPERLY** ANCHORED.

Power Designers USA LLC

4005 Felland Drive, Suite 116 • Madison, WI 53718 USA

+1.608.231.0450 • www.powerdesigners.com Power Designers USA LLC reserves the right to incorporate design and material changes without notice or obligation.



Design features, materials of construction and dimensional data are provided for your information ISSUED: 11/2016 RV-8X-12X-FS COPYRIGHT © 2016 Power Designers USA LLC